

## Chapter 2: System Management



# Table of Contents

<b>Chapter 2 System Management</b> .....	2
2.1 System Information .....	2
2.2 Web Timeout .....	2
2.3 User Management .....	3
2.3.1 User Overview .....	3
2.3.2 User Add .....	3
2.3.2 User Modify .....	4
2.3.4 User Delete .....	4

# Chapter 2 System Management

System OEM information modification and user management, etc.

## 2.1 System Information

1. Click Config->System Management->System Information Settings
2. This page is Configure and display the system information of OLT.

The screenshot shows a web management interface with a sidebar on the left and a main content area on the right. The sidebar is titled 'System Management' and has several menu items: 'System Information' (highlighted), 'Web Timeout', 'User Management', 'Port Management', 'Basic Service', 'Advanced Service', 'ONT Management', and 'ONT Profile Management'. The main content area is titled 'System Information Settings' and contains a table of system information. The table has two columns: 'Field' and 'Value'. The fields and their values are: System Description (GPON OLT), System Object ID (1.3.6.1.4.1.8888.1.3.34.1), System Port Quantity (16), System Startup Time (48 minute 50 second 89 tick), System Name (empty text box), System Location (empty text box), System Contact (empty text box), and Product Description (G08 GPON Product). Below the table are two buttons: 'Refresh' and 'Modify'.

Field	Value
System Description	GPON OLT
System Object ID	1.3.6.1.4.1.8888.1.3.34.1
System Port Quantity	16
System Startup Time	48 minute 50 second 89 tick
System Name	<input type="text"/>
System Location	<input type="text"/>
System Contact	<input type="text"/>
Product Description	G08 GPON Product

Figure 2-1

## 2.2 Web Timeout

1. Click Config->System Management->Web Timeout
2. This page configures the web timeout time, which can be 5, 10, 15 and 20 minutes.

The screenshot shows a web management interface with a sidebar on the left and a main content area on the right. The sidebar is titled 'System Management' and has several menu items: 'System Information', 'Web Timeout' (highlighted), 'User Management', 'Port Management', 'Basic Service', 'Advanced Service', 'ONT Management', and 'ONT Profile Management'. The main content area is titled 'Web Page Timeout Settings' and contains a form. The form has a label 'Current web page timeout: 5minutes' and a label 'Select new web page timeout: 5 minutes'. Below the label is a dropdown menu with the following options: 5, 10, 15, and 20. Below the dropdown menu is an 'Apply' button.


Figure 2-2

## 2.3 User Management

User management is used to modify, add and delete new users. The system administrator account cannot be deleted, and the user administrator account cannot modify user permissions, and cannot add user accounts. This page displays information such as product description, hardware version, software version, and MAC address.

### 2.3.1 User Overview

1. Click Config->System Management->User Management->User Overview
2. This page displays all the accounts and privilege of the device.

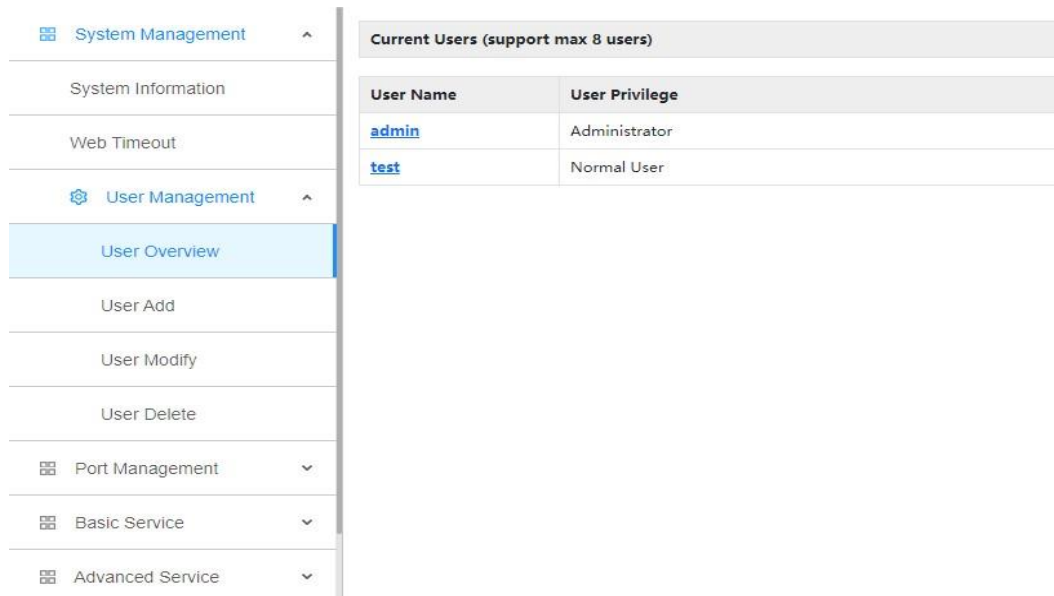


The screenshot shows a web management interface. On the left is a sidebar menu with categories: System Management (expanded), User Management (expanded), Port Management, Basic Service, and Advanced Service. Under User Management, 'User Overview' is selected. The main content area is titled 'Current Users (support max 8 users)' and contains a table with two columns: 'User Name' and 'User Privilege'. The table lists two users: 'admin' with 'Administrator' privilege and 'test' with 'Normal User' privilege.

User Name	User Privilege
<a href="#">admin</a>	Administrator
<a href="#">test</a>	Normal User

Figure 2-3

### 2.3.2 User Add

1. Click Config->System Management->User Management->User Add
2. This page is used to add user account and password.

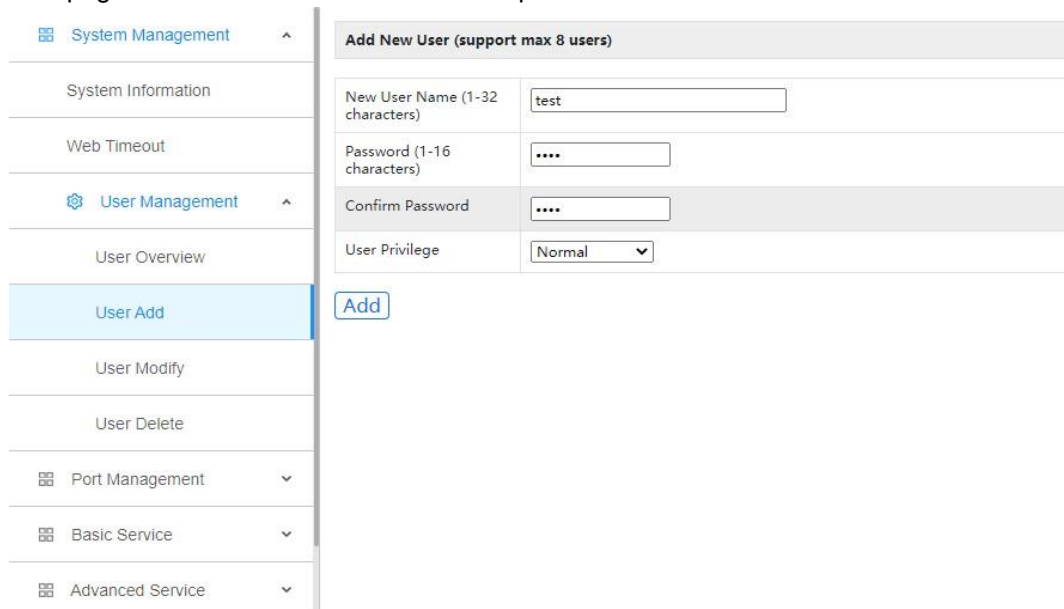

The screenshot shows the 'Add New User (support max 8 users)' form. The sidebar menu is similar to Figure 2-3, but 'User Add' is selected under 'User Management'. The form has four fields: 'New User Name (1-32 characters)' with the value 'test', 'Password (1-16 characters)' with masked characters '....', 'Confirm Password' with masked characters '....', and 'User Privilege' with a dropdown menu set to 'Normal'. An 'Add' button is located below the form.

Figure 2-4

## 2.3.2 User Modify

1. Click Config->System Management->User Management->User Modify
2. This page is used to modify user password and user privilege. The admin account privilege cannot be modified. Only the admin account can modify the privilege of other users.

System Management	
System Information	
Web Timeout	
User Management	
User Overview	
User Add	
<b>User Modify</b>	
User Delete	
Port Management	
Basic Service	
Advanced Service	

Modify User	
User Name	test
New Password (1-16 characters)	....
Confirm Password	....
User Privilege	Normal

Modify

Figure 2-5

## 2.3.4 User Delete

1. Click Config->System Management->User Management->User Delete
2. This page is used to delete user accounts. Only admin user can perform this operation.

System Management	
System Information	
Web Timeout	
User Management	
User Overview	
User Add	
User Modify	
<b>User Delete</b>	
Port Management	
Basic Service	
Advanced Service	

Delete Exist User	
Select User To Delete	admin

Refresh Delete

Figure 2-6