

Chapter 8: Maintain



Table of Contents

Chapter 8 Maintain	2
8.1 Software Upgrading	2
8.2 Configuration Operation	2
8.2.1 Configuration Update	2
8.2.2 Configuration Save	2
8.3 Device Reboot.....	3
8.4 ONT Operation	3
8.4.1 Software Upgrade	3
8.4.2 Upgrade Progress	4
8.4.3 Configuration Load.....	4
8.4.4 Load Progress.....	5
8.4.5 ONT Reboot	5
8.5 Logo Replace	6

Chapter 8 Maintain

8.1 Software Upgrading

1. Click Maintain->Software Upgrading
2. This page upgrades the OLT version. You can choose to upgrade the boot and host files. After the upgrade, restart the OLT to take effect.

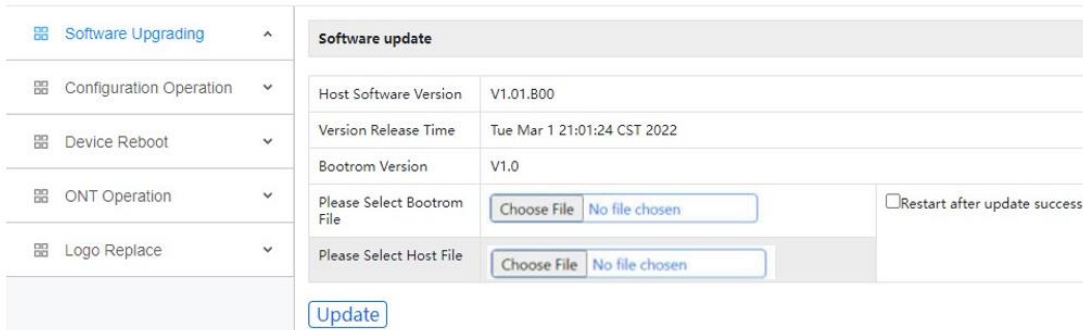


Figure 8-1

8.2 Configuration Operation

Configuration operations include upload, download and save configuration.

8.2.1 Configuration Update

1. Click Maintain->Configuration Operation->Configuration Update
2. This page uploads the configuration file to the OLT and saves the configuration file from the device to the PC.

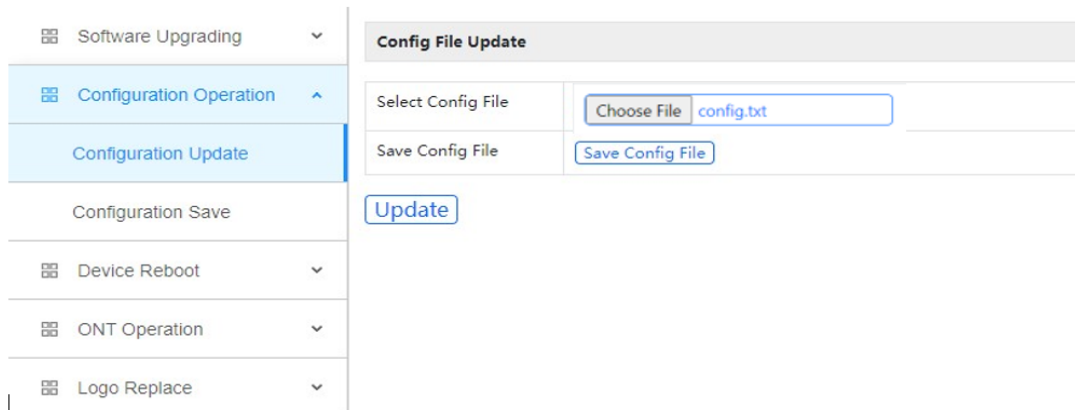


Figure 8-2

8.2.2 Configuration Save

1. Click Maintain->Configuration Operation->Configuration Save
2. This page saves the OLT configuration file to the flash.

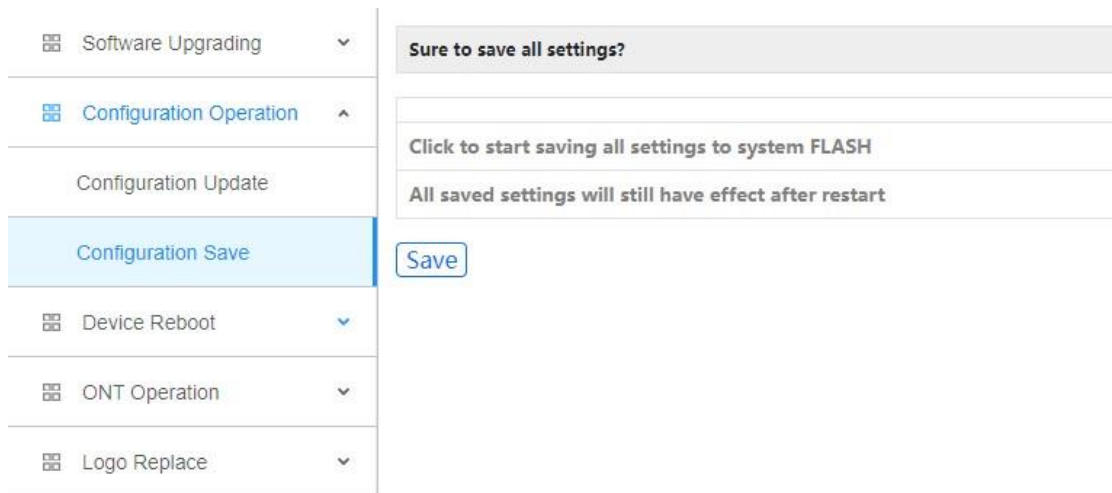


Figure 8-3

8.3 Device Reboot

1. Click Maintain->Device Reboot
2. This page restarts the OLT.

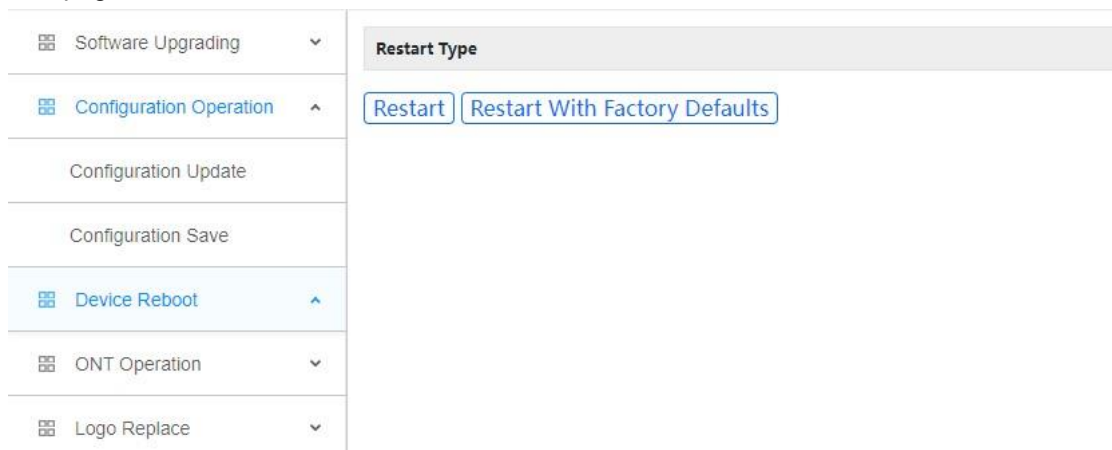


Figure 8-4

8.4 ONT Operation

ONU operations include upgrade the ONT and restart the ONT

8.4.1 Software Upgrade

1. Click Maintain->ONT Operation->Software Upgrade
2. This page configures ONT batch upgrade. The ONT upgrade file must be uploaded to the OLT, and then the matching ONT will be upgraded by the OLT.

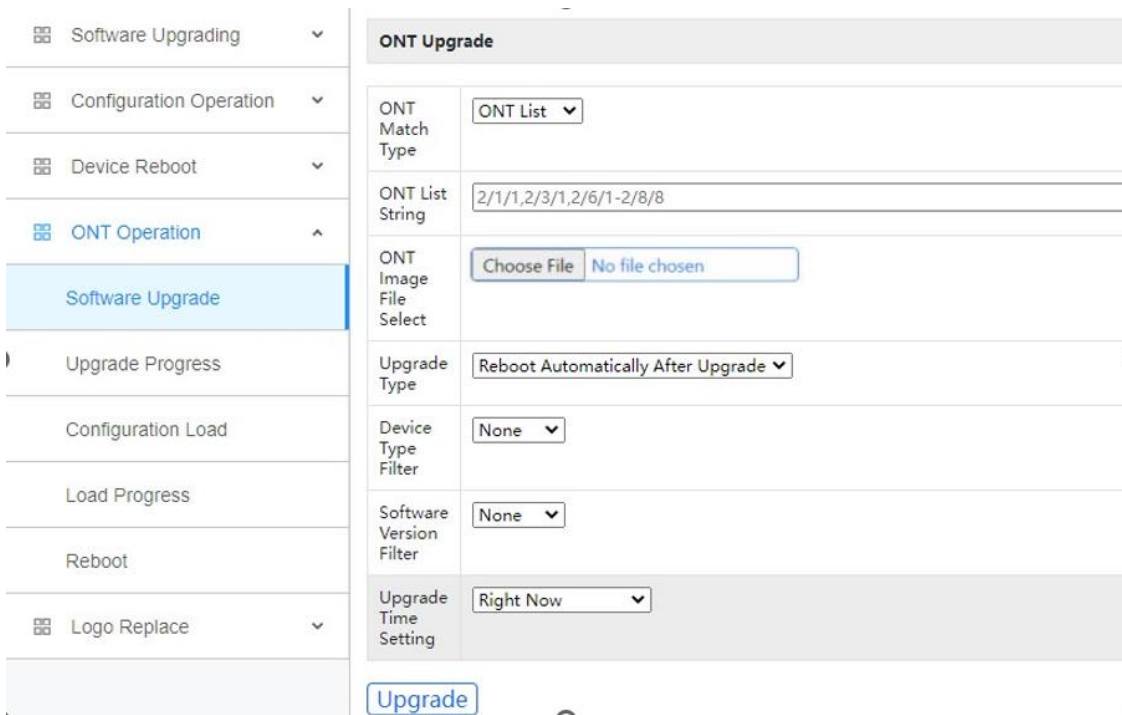


Figure 8-5

8.4.2 Upgrade Progress

1. Click Maintain->ONT Operation->Upgrade Progress
2. This page displays the upgrade progress of all ONTs.

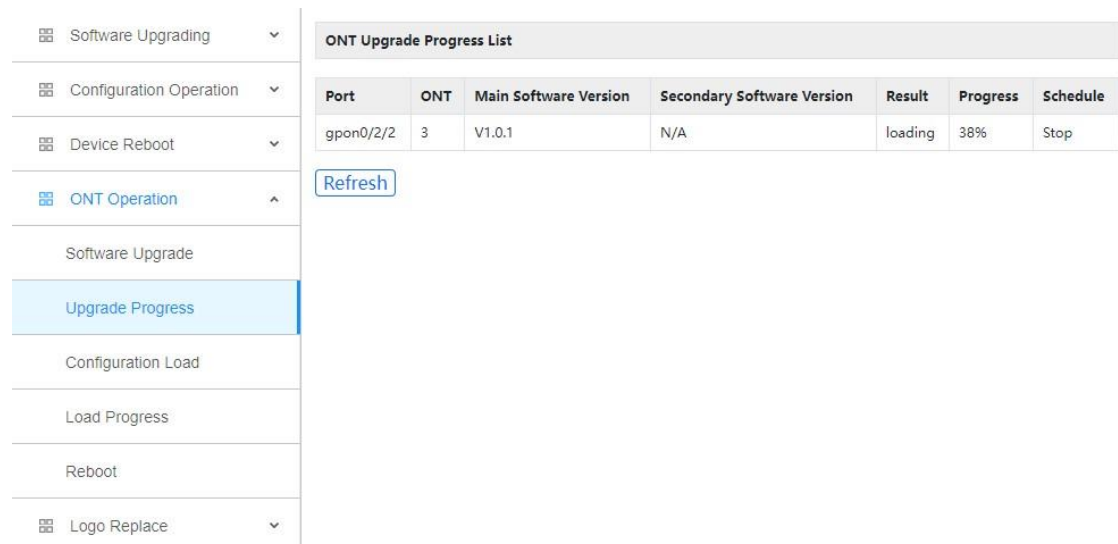


Figure 8-6

8.4.3 Configuration Load

1. Click Maintain->ONT Operation->Configuration Load
2. This page configures ONT XML configuration file load. The information is defined in a vendor-specific deployment descriptor.

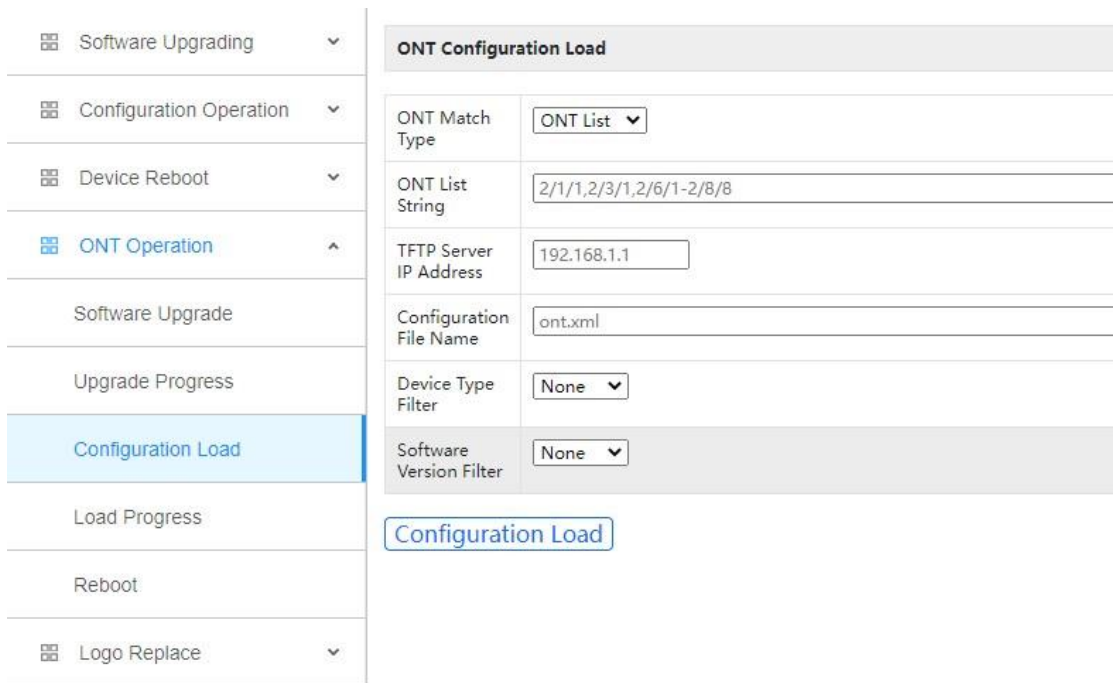


Figure 8-7

8.4.4 Load Progress

1. Click Maintain->ONT Operation->Load Progress
2. This page displays the XML configuration file load progress of all ONTs.

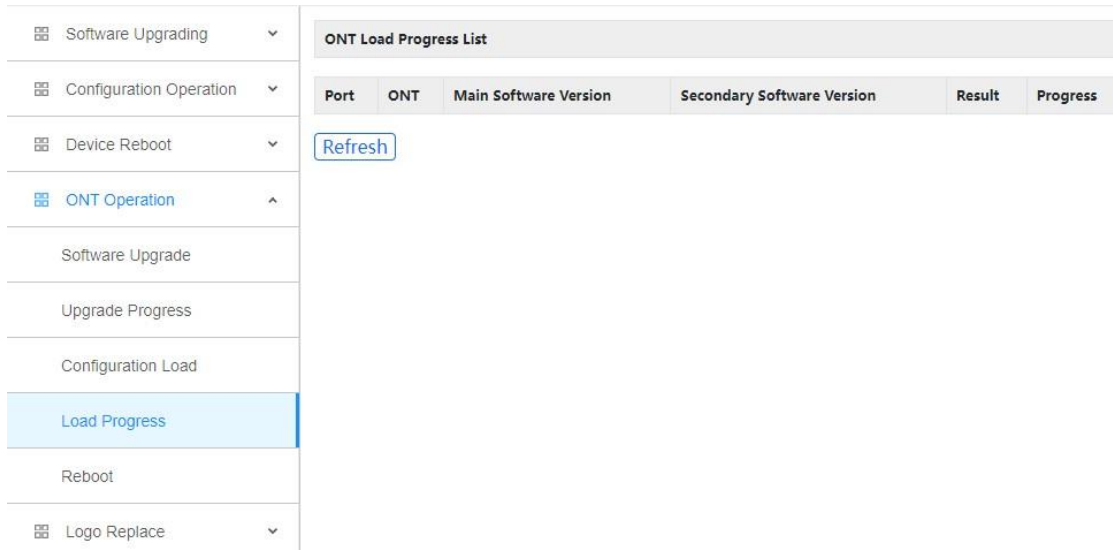


Figure 8-8

8.4.5 ONT Reboot

1. Click Maintain->ONT Operation->Reboot
2. This page restarts a single ONT or batches of ONTs.

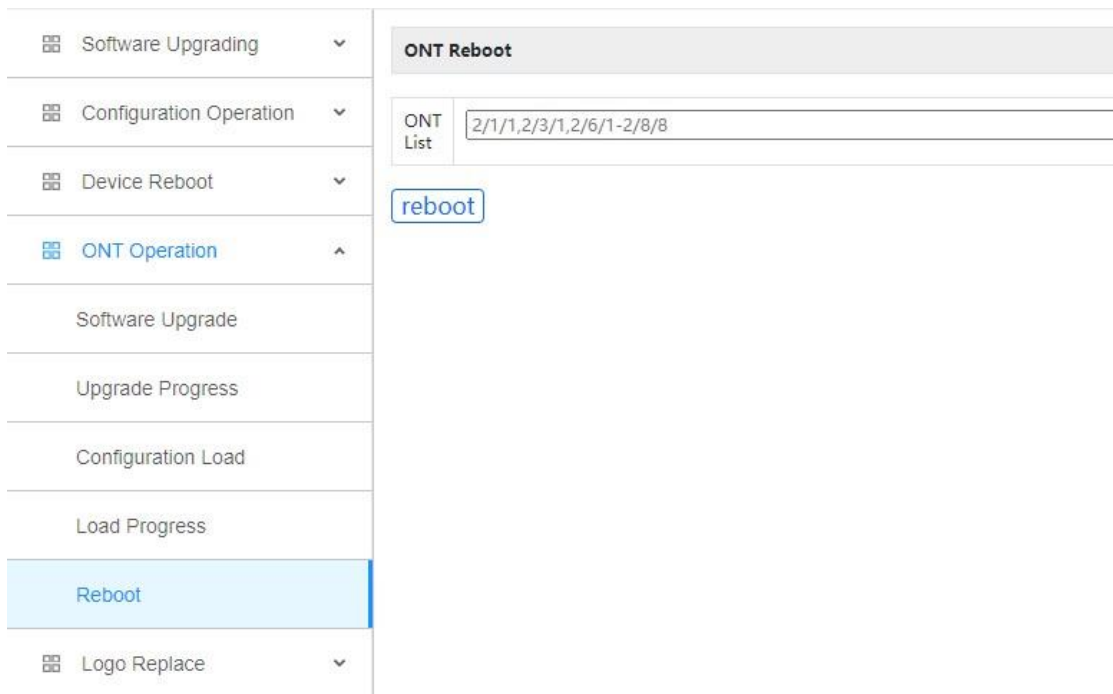


Figure 8-9

8.5 Logo Replace

1. Maintain->Logo Replace

2. This page replaces the logo information of the WEB page. After uploading the new logo, restart the browser and clear the cache.

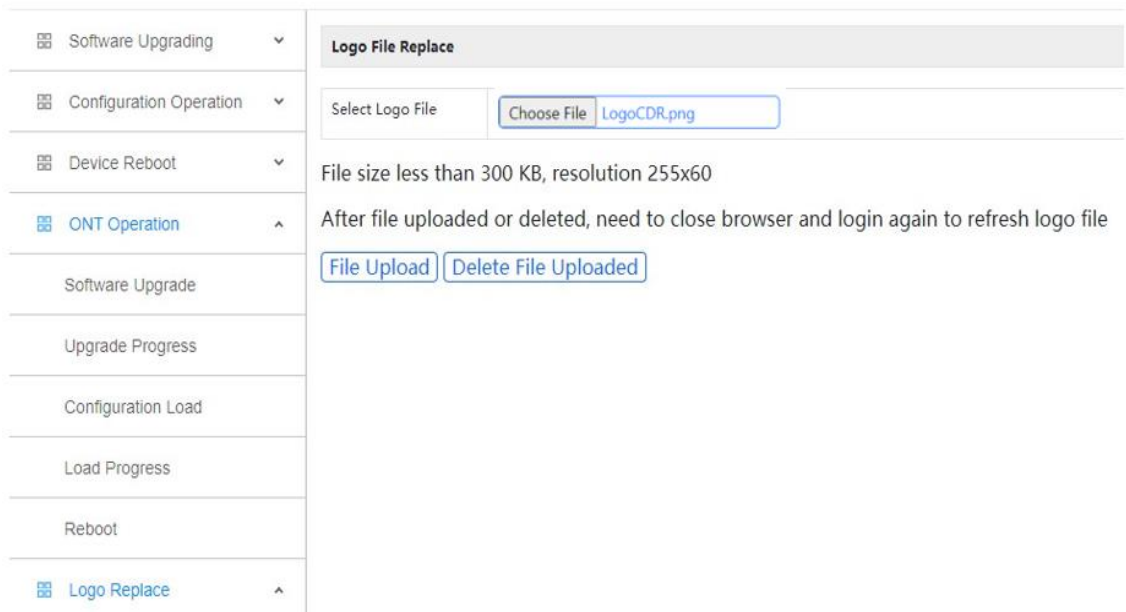


Figure 8-10