

Chapter-1

Monitor



Contents

Chapter 1 Monitor

1.1 System Information

1.1.1 LoginSwitch 3

1.1.2 Device Information 3

1.2 Port Information

1.2.1 Basic Information 4

1.2.2 Basic Statistics 4

1.2.3 Detail Statistics 5

1.1 System information

1.1.1 Login Switch

The default management address of the Switch is 192.168.168.1, the PC is configured as the address of the 192.168.168.X, and the network cable is connected to the MGMT port to access the Switch. The default user name and password are admin/admin.

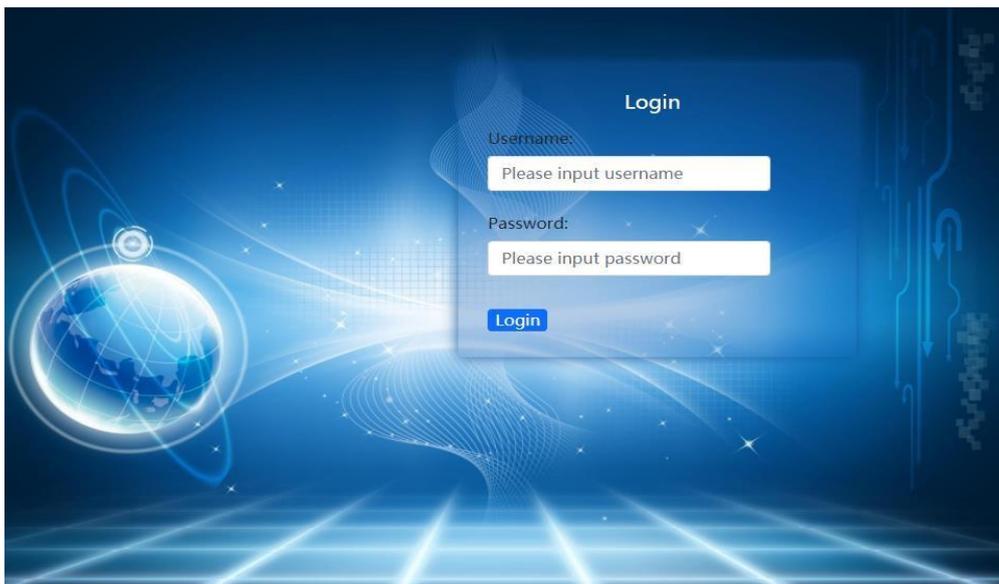


Figure 1-1

1.1.2 Device Information

1. Click Monitor-> System Information-> Device Information
2. This page displays information such as device description, hardware version, software version, and MAC address.

System Information	▼	Device Information	
Port Information	▼	Product Description	5710-54TX Switch Product
Syslog Information	▼	Hardware Version	V1.0
		Software Version	Switch 5710-54TX V1.00.B21
		MAC Address	00:00:00:00:00:33
		System Startup Time	0-Days 0-Hours 45-Minutes 32-Seconds
		Web Page Timeout (minute)	5
		Refresh	

Figure 1-2

1.2 Port Information

Port information displays device port status, port traffic statistics, and uplink optical module information.

1.2.1 Basic Information

1. Click Monitor-> Port Information-> Basic Information

2. This page displays the port status, priority, speed, MTU, description and other information.

System Information		Port Status Information						
Port	Status	Link	Priority	Set Speed	Actual Speed	MTU	Port Description (0-128 chars)	
eth0/0/1	enabled	down	0	auto	unknown	9600		
eth0/0/2	enabled	down	0	auto	unknown	9600		
eth0/0/3	enabled	down	0	auto	unknown	9600		
eth0/0/4	enabled	down	0	auto	unknown	9600		
eth0/0/5	enabled	down	0	auto	unknown	9600		
eth0/0/6	enabled	down	0	auto	unknown	9600		
eth0/0/7	enabled	down	0	auto	unknown	9600		
eth0/0/8	enabled	down	0	auto	unknown	9600		
eth0/0/9	enabled	down	0	auto	unknown	9600		
eth0/0/10	enabled	down	0	auto	unknown	9600		

Figure 1-3

1.2.2 Basic Statistics

1. Click Monitor-> Port Information-> Basic Statistics

2. This page displays simple statistics about packets transmit and receive by the port.

System Information		Port Status Information						
Port	Status	Link	Priority	Set Speed	Actual Speed	MTU	Port Description (0-128 chars)	
eth0/0/1	enabled	down	0	auto	unknown	9600		
eth0/0/2	enabled	down	0	auto	unknown	9600		
eth0/0/3	enabled	down	0	auto	unknown	9600		
eth0/0/4	enabled	down	0	auto	unknown	9600		
eth0/0/5	enabled	down	0	auto	unknown	9600		
eth0/0/6	enabled	down	0	auto	unknown	9600		
eth0/0/7	enabled	down	0	auto	unknown	9600		
eth0/0/8	enabled	down	0	auto	unknown	9600		
eth0/0/9	enabled	down	0	auto	unknown	9600		
eth0/0/10	enabled	down	0	auto	unknown	9600		
eth0/0/11	enabled	down	0	auto	unknown	9600		
eth0/0/12	enabled	down	0	auto	unknown	9600		

Figure 1-4

1.2.3 Detail Statistics

1. Click Monitor->Port Information->Detail Statistics

2. This page displays detailed statistics about the received and transmit packets on the port.

System Information	Port Selection			
Port Information	eth0/0/1			
Basic Information	Port Detail Statistics			
Basic Statistics	Pkts 64 Bytes	0	Pkts 65-127 Bytes	0
Detail Statistics	Pkts 128-255 Bytes	0	Pkts 256-511 Bytes	0
Syslog Information	Pkts 512-1023 Bytes	0	Pkts 1024-1518 Bytes	0
	RX Unicast Pkts	0	TX Unicast Pkts	0
	RX Multicast Pkts	0	TX Multicast Pkts	0
	RX Broadcast Pkts	0	TX Broadcast Pkts	0
	RX Frames	0	TX Frames	0
	RX Bytes	0	TX Bytes	0
	RX Discarded Pkts	0	TX Discarded Pkts	0
	RX Errors	0	TX Errors	0

Figure 1-5