

Chapter 27: Static Multicast table



Table of Contents

Chapter 27	Static Multicast Table.....	3
27.1	Static Multicast Table Overview	3
27.2	Configure Static Multicast Table.....	3
27.2.1	Static Multicast GroupConfiguration List.....	3
27.2.2	Create a Static Multicast Group.....	3
27.2.3	Add a Port to the Multicast Group.....	3
27.2.4	Create a Static Multicast Group based on Group IP	4
27.2.5	Display and Maintenance of Static Multicast Table	4

Chapter 27 Static Multicast Table

27.1 Static Multicast Table Overview

In addition to dynamic learning, multicast tables support manually configuration, and a manually configured multicast table is a static multicast table. The static multicast MAC table will not be aged and it cannot be lost after being saved.

At present, only the corresponding multicast entries of ipv4 can be static configured, and ipv6 multicast entries cannot be static configured.

27.2 Configure Static Multicast Table

27.2.1 Static Multicast Group Configuration List

Configuration Task	Description	Detailed Configuration
Create a Static Multicast Group	Required	27.2.2
Add a Port to the Multicast Group	Required	27.2.3
Create a Static Multicast Group based on Group IP	Optional	27.2.4
Display and Maintenance of Static Multicast Table	Optional	27.2.5

27.2.2 Create a Static Multicast Group

Operation	Command	Remarks
Enter global configuration mode	system-view	
Create a static multicast group	multicast mac-address mac-address vlan vlan-id	
Delete a static multicast group	undo multicast [mac-address mac-address vlan vlan-id]	

The parameter mac refers to the mac address of the multicast group. It is required to use the multicast address format, for example: 01:00:5e:__:__:__, ip refers to multicast ip, for example,224.0.1.1; vlan-id refers to VLAN ID, with the range of 1 to 4094. It must be an existed VLAN. If the added static multicast group belongs to a VLAN that does not exist,, the multicast group fails to be added.

27.2.3 Add a Port to the Multicast Group

Operation	Command	Remarks
Enter global configuration mode	system-view	

Add a port to a static multicast group	multicastmac-address <i>mac-address vlan</i> <i>vlan-id interface { all ethernet interface-list }</i>	
Delte a por from static multicast group	undo multicast mac-address <i>mac-address</i> vlan <i>vlan-id interface { all ethernet interface-list }</i>	

27.2.4 Create a Static Multicast Group based on Group IP

Operation	Command	Remarks
Enter global configuration mode	system-view	
Create a static multicast group based on group IP	multicast ip-address <i>ip-address vlan</i> <i>vlan-id</i>	
Delete a static multicast group based group IP	undo multicast ip-address <i>ip-address vlan</i> <i>vlan-id</i>	
Add a port to a static multicast group base on group IP	multicast ip-address <i>ip-address vlan</i> <i>vlan-id interface { all ethernet interface-list }</i>	
Delte a por from static multicast group base on group IP	undo multicast ip-address <i>ip-address vlan</i> <i>vlan-id interface { all ethernet interface-list }</i>	

27.2.5 Display and Maintenance of Static Multicast Table

Operation	Command	Remarks
Display Static Multicast Table by MAC	display multicast mac-address <i>mac-address</i>	
Display Static Multicast Table by IP	display multicast ip-address <i>ip-address</i>	