Chapter 48: SLF-Control



# **Table of Contents**

(	Chapter 48 SLF-Control	2
4	18.1 SLF-Control Overview	2
4	18.2 Configure SLF-Control	2
	48.2.1 Configure SLF-forward List	2
	48.2.2 Configure SLF-forward Unicast	2
	48.2.3 Display and Maintain SLF-forward Configurations	2

## **Chapter 48 SLF-Control**

#### 48.1 SLF-Control Overview

Whether the GPON forwards the packet with an unknown source MAC address requires the network administrator to plan according to the security policy. The GPON defaults to forward the packet with an unknown source MAC address. You can disable the forwarding function of packet with an unknown source MAC address by setting the commands. After disable this function, if the device receives the packets, it will check whether the source mac exists in the mac table. If it does not exist, the packets will be discarded, that is, the GPON only forwards the packet with the source MAC address being known.

### 48.2 Configure SLF-Control

#### 48.2.1 Configure SLF-Configuration List

	Configuration Task	Description	Detailed Configuration
Configure SLF-forward unicast		Required	48.2.2
Displays and Maintain SLF-forward 0	Configurations	Optional	48.2.3

## 48.2.2 Configure SLF-forward Unicast

Generally, this function is used when the MAC address learning function is disabled or MAC address limit function is disabled.

Operation	Command	Remarks
Enter the global configuration mode	system-view	
Enter interface configuration mode	interface ethernet interface-numt	
Enable Slf-forward	slf-forward	
Disable Slf-forward	undo slf-forward	Disabled by default.

# 48.2.3 Display and Maintain SLF-forward Configurations

Operation	Command	Remarks
Displays the slf-forward control	display slf-forward interface [ ethernet interface-num ]	