

Chapter-51

Local-Switch



Contents

Chapter-51 Local-Switch

Chapter 51 Local-Switch	3
51.1 Local-Switch Overview	3
51.2 Configure Local-Switch	3
51.2.1 Local-switch Configuration List	3
51.2.2 Enable local-switch	3
51.2.3 Displays and Maintain Local-switch Configurations	4

Chapter 51 Local-Switch

51.1 Local-Switch Overview

Normally, packets coming from port A are not forwarded from port A by the Switch. However, it may require packets coming from the A port are forwarded from the A port sometimes. In this case, you can use the local-Switch.

51.2 Configure Local-Switch

51.2.1 Local-switch Configuration List

Configuration Task	Description	Detailed Configuration
Enable local-switch	Required	51.2.2
Displays and maintain local-switch Configurations	Optional	51.2.3

51.2.2 Enable local-switch

Operation	Command	Remarks
Enter global configuration mode	system-view	
Enter interface configuration mode	interface ethernet <i>interface-num</i>	
Enable local-switch	local-switch	
Disable local-switch	undo local-switch	Disabled by default.

51.2.3 Displays and Maintain Local-switch Configurations

Operation	Command	Remarks
Displays the local-switch control	display local-switch interface [ethernet <i>interface-num</i>]	