

Chapter-2

System Management



Contents

Chapter 2 System Management

- 2.1 System Information 3
- 2.2 Web Timeout 3
- 2.3 User Management 4
 - 2.3.1 User Overview 4
 - 2.3.2 User Add 4
 - 2.3.3 User Modify 5
 - 2.3.4 User Delete 6

2.1 System Information

1. Click Config->System Management->System Information

2. This page is configured and displays the OEM information of the Switch.

System Management ^	System Information Settings	
System Information	System Description	Datacom Switch
Web Timeout	System Object ID	1.3.6.1.4.1.8888.1.3.32.1
User Management v	System Port Quantity	54
Port Management v	System Startup Time	49 minute 31 second 65 tick
Basic Service v	System Name	<input type="text" value="Switch"/>
	System Location	<input type="text" value="sample sysLocation factory default"/>
	System Contact	<input type="text" value="DataCom (http://www.datacom.com)"/>
	Product Description	Switch Product
	<input type="button" value="Refresh"/> <input type="button" value="Modify"/>	

Figure 2-1

2.2 Web Timeout

1. Click Config->System Management->Web Timeout

2. This page configures the web timeout time, which can be 5, 10, 15 and 20 minutes.

System Management ^	Web Page Timeout Settings	
System Information	Current web page timeout: 5 minutes	
Web Timeout	Select new web page timeout: <input type="text" value="5"/> minutes	
User Management v	<input type="button" value="Apply"/>	
Port Management v		
Basic Service v		

Figure 2-2


2.3 User Management

User management is used to modify, add and delete new users. The system administrator account cannot be deleted, and the user administrator account cannot modify user permissions, and cannot add user accounts.

2.3.1 User Overview

1. Click Config->System Management->User Management->User Overview

2. This page displays all the accounts and privilege of the device.

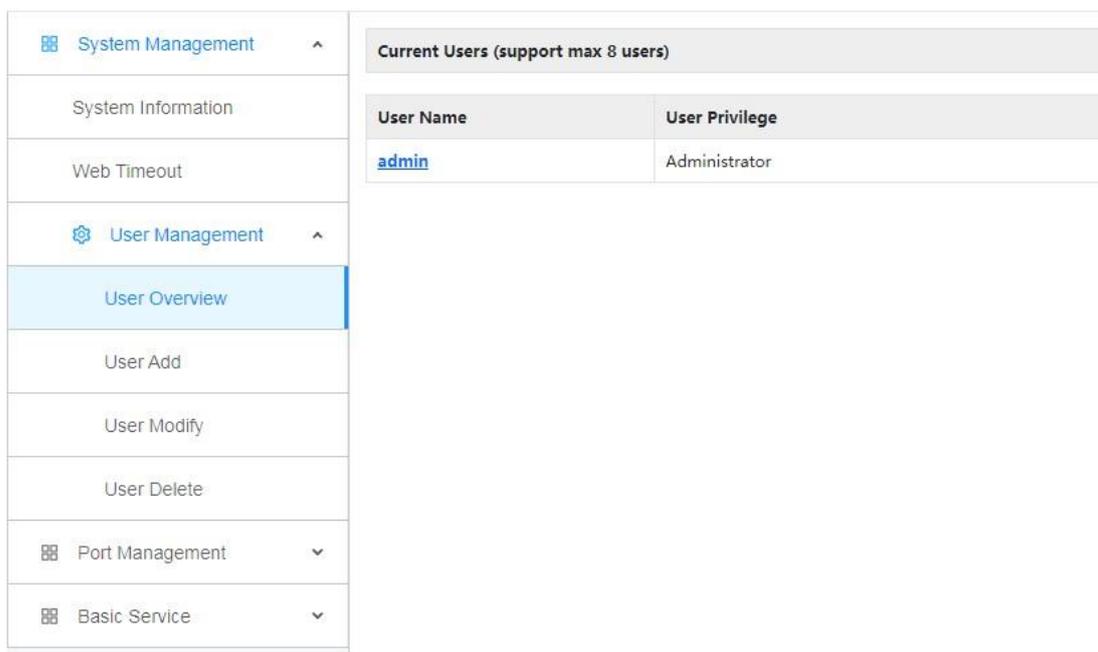

Current Users (support max 8 users)	
User Name	User Privilege
admin	Administrator

Figure 2-3

2.3.2 User Add

1. Click Config->System Management->User Management->User Add

2. This page is used to add user account and password.

<ul style="list-style-type: none"> System Management ^ System Information Web Timeout User Management ^ User Overview <li style="background-color: #e1f5fe;">User Add User Modify User Delete Port Management v Basic Service v 	<div style="background-color: #f5f5f5; padding: 5px;">Add New User (support max 8 users)</div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 60%;">New User Name (1-32 characters)</td> <td><input type="text"/></td> </tr> <tr> <td>Password (1-16 characters)</td> <td><input type="password"/></td> </tr> <tr> <td>Confirm Password</td> <td><input type="password"/></td> </tr> <tr> <td>User Privilege</td> <td>Normal v</td> </tr> </table> <p style="text-align: center;">Add</p>	New User Name (1-32 characters)	<input type="text"/>	Password (1-16 characters)	<input type="password"/>	Confirm Password	<input type="password"/>	User Privilege	Normal v
New User Name (1-32 characters)	<input type="text"/>								
Password (1-16 characters)	<input type="password"/>								
Confirm Password	<input type="password"/>								
User Privilege	Normal v								

Figure2-4

2.3.3 User Modify

1. Click Config->System Management->User Management->User Modify
2. This page is used to modify user password and user privilege. The admin account privilege cannot be modified. Only the admin account can modify the privilege of other users.

<ul style="list-style-type: none"> System Management ^ System Information Web Timeout User Management ^ User Overview User Add <li style="background-color: #e1f5fe;">User Modify User Delete Port Management v Basic Service v 	<div style="background-color: #f5f5f5; padding: 5px;">Modify User</div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 60%;">User Name</td> <td>Please Select v</td> </tr> <tr> <td>New Password (1-16 characters)</td> <td><input type="password"/></td> </tr> <tr> <td>Confirm Password</td> <td><input type="password"/></td> </tr> <tr> <td>User Privilege</td> <td>Normal v</td> </tr> </table> <p style="text-align: center;">Modify</p>	User Name	Please Select v	New Password (1-16 characters)	<input type="password"/>	Confirm Password	<input type="password"/>	User Privilege	Normal v
User Name	Please Select v								
New Password (1-16 characters)	<input type="password"/>								
Confirm Password	<input type="password"/>								
User Privilege	Normal v								

Figure 2-5

2.3.4 User Delete

1. Click Config->System Management->User Management->User Delete
2. This page is used to delete user accounts. Only admin user can perform this operation

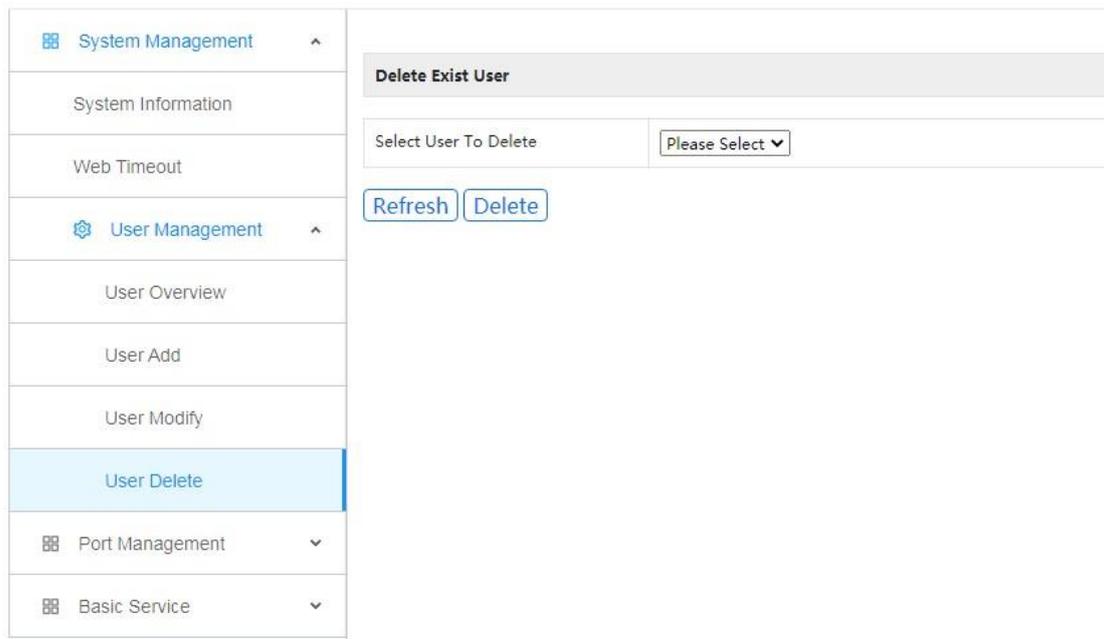


Figure 2-6